







Thule Rapid System Kit 1359

> Instructions

CHEVROLET Niva, 5-dr SUV, 03-09

LADA 119, 5-dr Hatchback, 05-13 (FIN)

LADA Kalina 1119, 5-dr Hatchback, 05-13

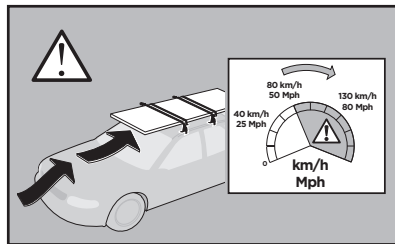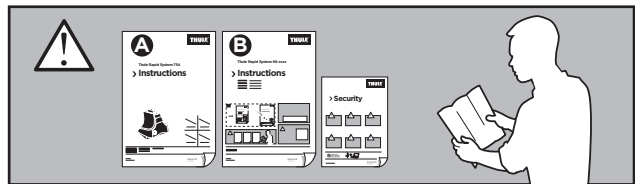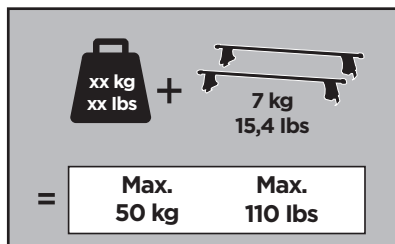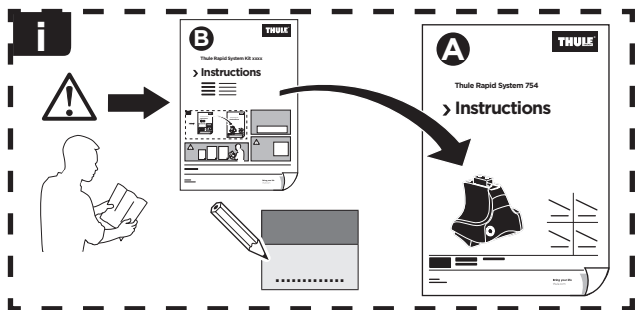


ISO 11154-E


141359

C.20160610
519-1359-02

Bring your life
thule.com





x1

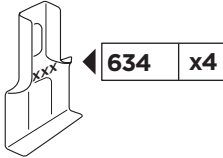

x1

1

	X (scale)	X (mm)	X (inch)
CHEVROLET Niva , 5-dr SUV, 03-09	38	1031	40 ⁵ / ₈
LADA 119 , 5-dr Hatchback, 05-13 (FIN)	24	891	35 ¹ / ₈
LADA Kalina 1119 , 5-dr Hatchback, 05-13	24	891	35 ¹ / ₈

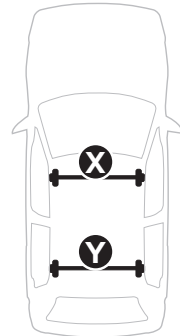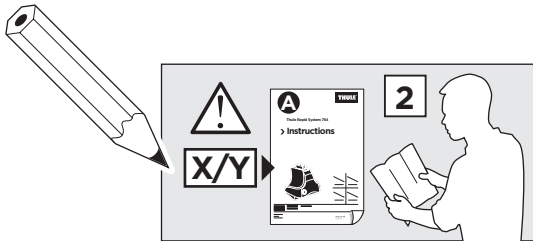



	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Niva , 5-dr SUV, 03-09	35,5	1006	39 ⁵ / ₈
LADA 119 , 5-dr Hatchback, 05-13 (FIN)	22,5	876	34 ¹ / ₂
LADA Kalina 1119 , 5-dr Hatchback, 05-13	22,5	876	34 ¹ / ₂

2

CHEVROLET Niva, 5-dr SUV, 03-09

LADA 119, 5-dr Hatchback, 05-13 (FIN)

LADA Kalina 1119, 5-dr Hatchback, 05-13

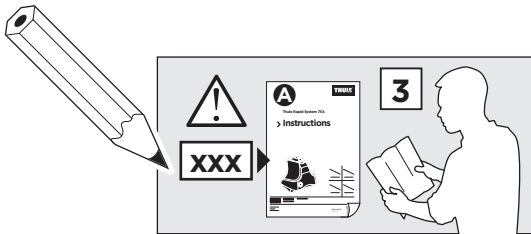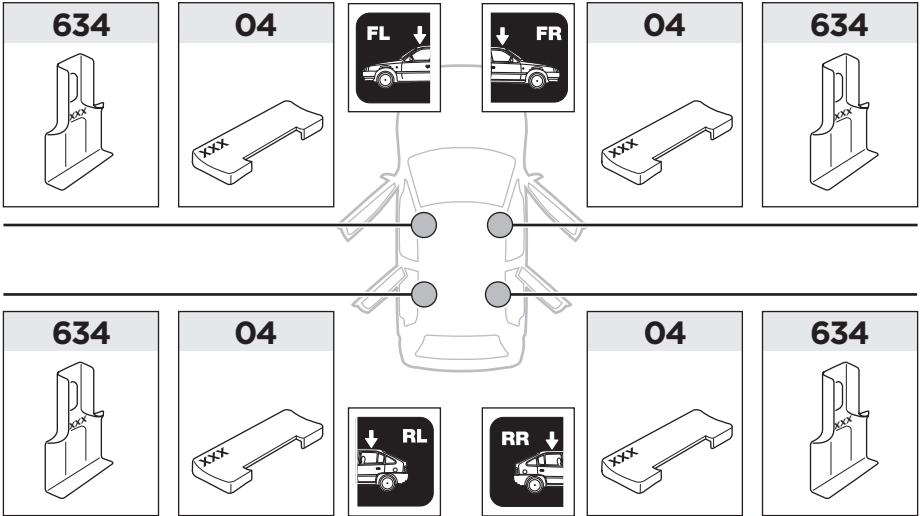

3

